



35U - PVC Pipe to Push-On Fitting Restraint Series 3000PO Kits for 4" - 12" Applications 4" - 12" for IPIOD Diameter PVC 4" - 12" for IPIS Diameter PVC

Revised 6/20/2016

FOR: Restrains AWWA C900 PVC pipe in sizes 4" – 12" to Push-on AWWAC153 ductile iron fittings


Restrains *IPS diameter PVC pipe in sizes 4" - 12" to Push-on AWWAC153 ductile iron fittings. *Transition gasket required

FEATURES and ADVANTAGES:

- Available for PVC sizes 4" through 12" for both ductile iron outside diameter (DIOD) pipe or iron pipe size (IPS) outside diameter pipe
- •Restraints and fasteners rated at the listed pressure on the PVC pipe and restraint shall have a 2:1 safety factor
- •Full 360° contact, no pipe distortion or point loading
- •Connecting T-head bolts, clamp assembly bolts, and hex nuts consist of low alloy high strength steel and comply with applicable requirements of ANSI/AWWA C111/A21.11.
- •System pressure rating *DR14 -305psi, *DR18 235psi, *DR25 165psi. *Derated if all T-head bolts provided cannot be installed
- •For easy identification, *IPS* pipe diameter clamps are GREY and *DI* pipe diameter clamps are BLACK

SAMPLE SPECIFICATIONS:

All clamps are made of high strength grade 65-45-12 ductile iron in accordance with the requirements and specifications of ASTM A536. Clamps coated with alkyd resin based baking enamel. Clamps provide 360 degree contact with the PVC pipe and internal serrations are machined to exact tolerances. Restrainers approved per applicable requirements of ASTM F1674, current revisions apply. Kits include, 1 each 3000C restrainer, 2 each hex head clamping bolts and nuts for restrainer assembly, and restraint to fitting connecting T-head bolts and hex nuts. For use on water or wastewater pipelines subject to hydrostatic pressure and tested in accordance with ASTM D2774 or AWWA C600. *Note: 10" and 12" fittings may have a single top/bottom restraining lug, contact Tyler Union for restraint pressure rating

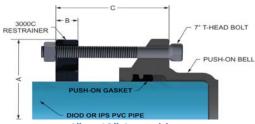

4" to 12" Assembly

Nominal Pipe Size	Series 3000PO For PVC Pipe With Ductile Pipe O.D.		Series 3000PO For PVC Pipe With IPS Pipe O.D.		*A	*В	C Max.	T-head Connecting Bolt		Quantity, Sizing and Torque For Clamp Assembly Bolts			Kit lbs.
	Nom. Pipe O.D.	DIOD Part#	Nom. Pipe O.D.	IPS Part#	Dim.	Dim.	Dim.	Qty.	Size	Qty	Size	Torque	~Wt
4"	4.80"	462521	4.50"	<u>CALL</u>	9.12"	1.12"	6.00"	2	3/4" X 7"	2	5/8" X 3.5"	100 ftlbs.	7.9
6"	6.90"	462538	6.63"	<u>CALL</u>	11.12"	1.12"	6.00"	2	3/4" X 7"	2	5/8" X 3.5"	100 ftlbs.	9.7
8"	9.05"	462545	8.63"	<u>CALL</u>	14.74"	1.25"	6.00"	2	3/4" X 7"	2	3/4" X 5"	150 ftlbs.	14.8
10"	11.10"	462552	10.75"	<u>CALL</u>	16.81"	1.38"	6.00"	4	3/4" X 7"	2	7/8" X 5"	150 ftlbs.	23.8
12"	13.20"	462569	12.75"	<u>CALL</u>	19.45"	1.38"	6.00"	4	3/4" X 7"	2	7/8" X 5"	150 ftlbs.	26.3
*Note: Annr	*Note: Approximate dimension												

Installation Instructions for Sizes 4" – 12" Series 3000PO:











- Step (1): Figure 1, Push-On joint assembly per AWWA C600 make sure the pipe spigot is beveled, ensure the fitting gasket seat is clean and dry prior to joint assembly. Insert the gasket into the fitting gasket seat and evenly lubricate the inside surface of the gasket only. Confirm the exterior pipe wall of the spigot end of the pipe is clean and free from raised or rough areas. Keeping the pipe straight with the fitting socket, insert the spigot end of the pipe fully against the pipe stop inside the fitting socket.
- Step (2): Per Figure 2, use a 7" T-head bolt (included) as a guide and mark the location on the pipe where the restrainer will be assembled.
- Step (3): Assemble restrainer per Figure 3, leaving sufficient threads on the end of the T-head bolt to fully engage nut.
- <u>Step (4)</u>: Tighten the restrainer clamp assembly bolts on each side evenly to the recommended torque maintaining even gaps between the clamp pads. (4'' 6'' 100 ft lbs., 8'' 12'' 150 ft. lbs.)
- <u>Step (5):</u> Connect restrainer to fitting per Figure 5. Insert the 7" T-head bolt (bolts and hex nuts provided) through the fitting ear and tighten the hex nut up to the restrainer hand tight plus a half turn. Do not over tighten T-head bolts thus forcing the spigot further into the joint.

Tyler Union Waterworks Contact Information

Tyler: 11910 CR 492 ● Tyler, Texas 75706 ● (800) 527-8478 Anniston: 1501 W 17th St. ● Anniston, AL 36201 ● (800) 226-7601 Corona: 1001 El Camino Ave. ● Corona, CA 92879 ● (866) 527-8471 www.tylerunion.com